

High-frequency AC Method

Bench Top Ionizer Cleaning Box

EC-B SERIES



2025.2



|--|

Compact dust collection and removal features

Three discharge modes

The **EC-B** features two pulse air modes in addition to the standard continuous mode.

3 white LED illumination


Three white LEDs illuminate the work area, helping ensure you don't overlook any dust that has adhered to workpieces.

Dust collecting fan that prevents dust from re-adhering

A powerful dust collecting fan exhausts dust quickly, preventing re-adhesion of dust.



Economic and ecological benefits of pulse (intermittent) air



Note: Calculated using operating conditions at Panasonic Industry Plant, 8 hours per day × 20 days.

- Dust removal and charge removal by intermittent air
- Possible to control dust removal time in timer mode
- External input allows the tool to be used in conjunction with other equipment such as a foot switch

ORDER GUIDE

Туре	Charge removal time $(\pm 1,000 \text{ V} \rightarrow \pm 100 \text{ V})$	lon balance	Model No.
200 mm 7.874 in width type	25	±10 V or less	EC-B01-EX
400 mm 15.748 in width type	0.5 sec. approx or less (Note)		EC-B02-EX

Note: Typical value at 100 mm 3.937 in from the front of air outlet at an applied air pressure of 0.50 MPa.

OPTIONS

Туре	Model No.	Description		
Duct flange	EC-BD50	For ø50 mm ø1.969 in duct flange	A flange that connects a duct hose for air	
	EC-BD76	For ø76 mm ø2.992 in duct flange	exhaust to the EC-B main body	
Air filter	EC-BFX3	For EC-B01-EX	Replacement filter (3 pcs. per set)	
	EC-B2FX3	For EC-B02-EX		
Spot nozzle	EC-BAS	Exclusive nozzle for EC-B02-EX	lonized air can be collected around the center. (2 pcs. per set)	

SPECIFICATIONS

\swarrow	Туре	200 mm 7.874 in width type	400 mm 15.748 in width type		
Item	Model No.	EC-B01-EX	EC-B02-EX		
Applicable reg	gulations	CE Marking (EMC Directive, RoHS Directive), UKCA Marking (EMC Regulations, RoHS Regulations)			
Charge removes $(\pm 1,000 \text{ V} \rightarrow 1)$		0.5 sec. approx.	0.5 sec. approx. or less (Note 2)		
lon balance	ance ±10 V or less		or less		
Applicable fluid		Air (dried	Air (dried clean air)		
Supplied air flow		Max. 300 ℓ/min. (ANR) or less	Max. 500 ℓ/min. (ANR) or less		
Air pressure r	ange	0.05 to 0.50 MPa			
Power supply	voltage	Accessory AC adapter (Note 3) INPUT: 100-240 V AC ±10 % 50/60 Hz (OUTPUT: 24 V DC)			
Power consumption		80 VA or less	90 VA or less		
Dust removal operation output		Photocoupler output / Universal • Max sink current: 100 mA • Residual voltage: 2.5 V or less (at sink current of 100 mA or less)			
Output operation		During dust removal operation	During dust removal operation: ON, during standby: OFF		
External input		0 V short-circuit: Input received			
Timer mode		2 sec. / 5 sec. / 10 sec. / synchronized with sensor or with external input selectable by switch			
Pulse air moo	le	Pulse 1 (long) / Pulse 2 (short) / OF	Pulse 1 (long) / Pulse 2 (short) / OFF (continuous) selectable by switch		
Ambient temp	perature	0 to +40 °C +3	0 to +40 °C +32 to +104 °F		
Ambient hum	idity	35 % to 65 % RH (No	35 % to 65 % RH (No dew condensation)		
Enclosure ea	rthing method	C (capaci	C (capacitor) earth		
Net weight		Main body: 6.5 kg approx.	Main body: 13 kg approx.		
Accessories		AC adapter: 1pc., Filter: 1	AC adapter: 1pc., Filter: 1pc., Protective mesh: 1pc.		


Notes: 1) Where measurement conditions have not been specified precisely, the conditions used were an ambient temperature of +20 °C +68 °F.

2) Typical value at 100 mm 3.937 in from the front of air outlet at an applied air pressure of 0.50 MPa.


3) Please prepare an AC cable separately as it is needed.

I/O CIRCUIT DIAGRAMS


I/O circuit diagram

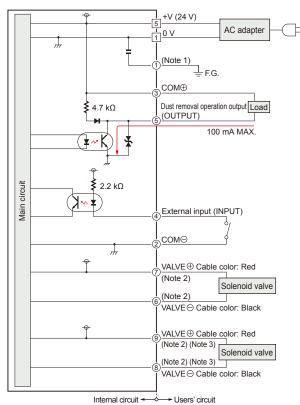

Terminal block diagram

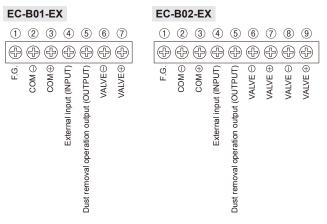

Pin layout for AC adapter power supply connector




- Notes: 1) The F.G. terminal has continuity with the enclosure.
 - 2) This terminal is for the solenoid valve only. Do not connect any line
 - to it other than the power supply line for the solenoid valve. 3) The **EC-B01-EX** has 7 terminals, and the **EC-B02-EX** has 9
 - terminals.

PRECAUTIONS FOR PROPER USE


- Never use this product in a device for personnel protection.
- In case of using devices for personnel protection, use products which meet laws or standards, such as OSHA, ANSI or IEC etc., for personnel protection applicable in each region or country.
- Do not use this product in places where there may be a danger of flammable or combustible items being present.
- When carrying, hold the bottom of the main unit from both sides. Do not hold the transparent antistatic cover or damage may occur.
- High voltages are applied to the discharge needle, so never touch the discharge needle while the power for the product is turned on, otherwise electric shocks may result.
- Be sure to ground the main body of this product via ground terminal to ensure electric shock prevention and reliable charge removal.
- Since the tip of the discharge needle is pointed, take sufficient care in handling the discharge needle, or injuries may result.
- The cut edges of the protective mesh are sharp, so be very careful when handling the mesh, otherwise injury may occur.
- Turn off the power and air before carrying out any maintenance or cleaning.
 Make sure that the supply of air has been fully shut off and that all pressures at the product and inside the tubes are at zero before continuing. If this is not done, air pressure may cause operating problems or accidents.
- This product has been developed / produced for industrial use only.
- This product detects the air supply status.
- If air is not being supplied to the product, or if the pressure of air being supplied is 0.6 MPa or higher, the product will treat this as an error condition, and dust removal operation will not be carried out when an object (electrostatically-charged object) is inserted.
- Do not change the pressure sensor settings. If the settings are changed, this product may cease to operate correctly.

DIMENSIONS (Unit: mm in)

The CAD data can be downloaded from our website.

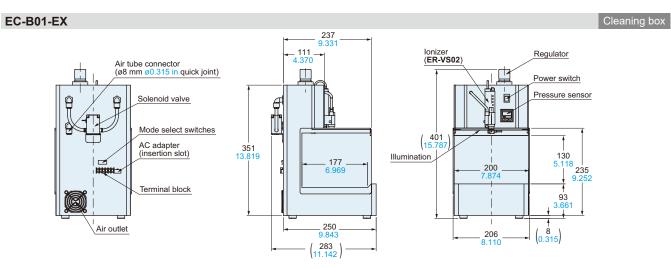

EC-B02-EX

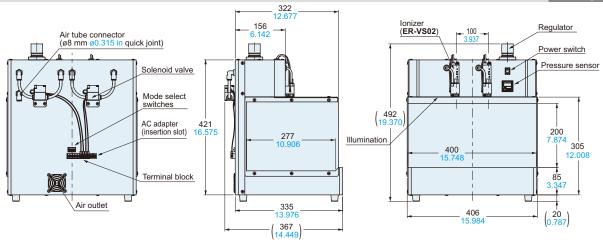

Cleaning box

Disclaimer

The applications described in the catalog are all intended for examples only. The purchase of our products described in the catalog shall not be regarded as granting of a license to use our products in the described applications. We do NOT warrant that we have obtained some intellectual properties, such as patent rights, with respect to such applications, or that the described applications may not infringe any intellectual property rights, such as patent rights, of a third party.



Panasonic Industry Co., Ltd.

Industrial Device Business Division 7-1-1, Morofuku, Daito-shi, Osaka 574-0044, Japan industry.panasonic.com